


Avstånd som behövs för dropnose nedre plan.

Drop nose start

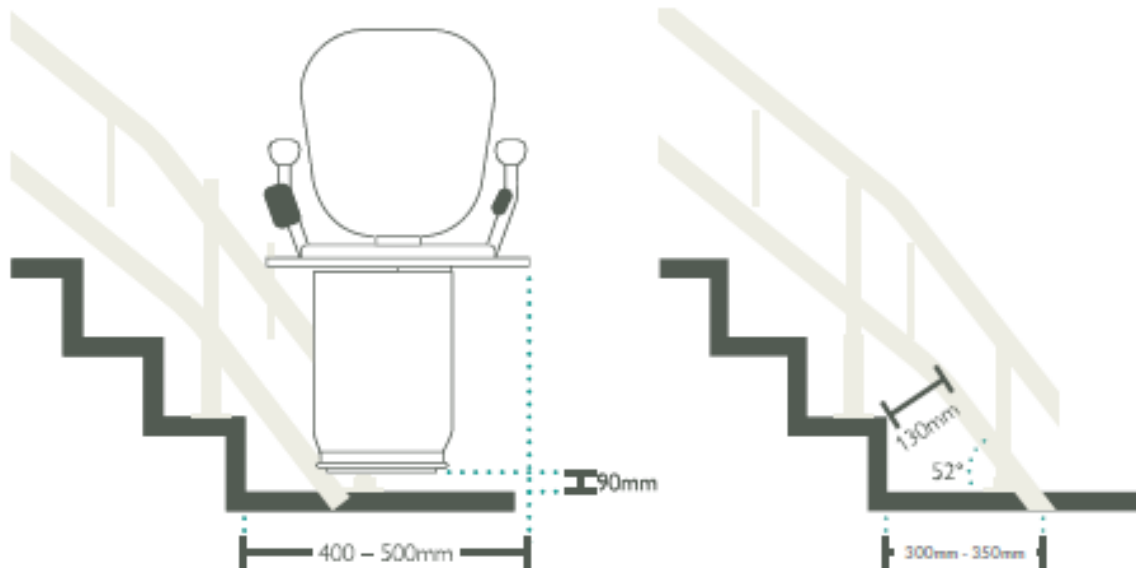

The rail protrusion for a standard is approximately 420mm from riser one. A drop nose start can be used to reduce this measurement to approximately 300mm if there is a doorway or walkway at the bottom of the stairs.